



Installation instruction for WB1205S

1	Basket	As following table	6		1 pcs
2		As following table	7		1 pcs
3		1 pcs	8		ST4 x 16 30 pcs
4		2 pcs	9		ST 5 x 20 6 pcs
5		1 pcs	10		ST4 x 40 2 pcs


Item No.	quantity of basket	"W"	"H"	
WB1205S.015E	6 pcs	150	1970-2270	12 pcs
WB1205S.020E		200		
WB1205S.025E		250		
WB1205S.030E		300		
WB1205S.040E		400		
WB1205S.015D	5 pcs	150	WB1205S.015D (1650-1950) WB1205S.015D1 (1770-2070) WB1205S.015D2 (1570-1870)	10 pcs
WB1205S.020D		200		
WB1205S.025D		250		
WB1205S.030D		300		
WB1205S.040D		400		
WB1205S.015C	4 pcs	150	1270-1570	8 pcs
WB1205S.020C		200		
WB1205S.025C		250		
WB1205S.030C		300		
WB1205S.040C		400		

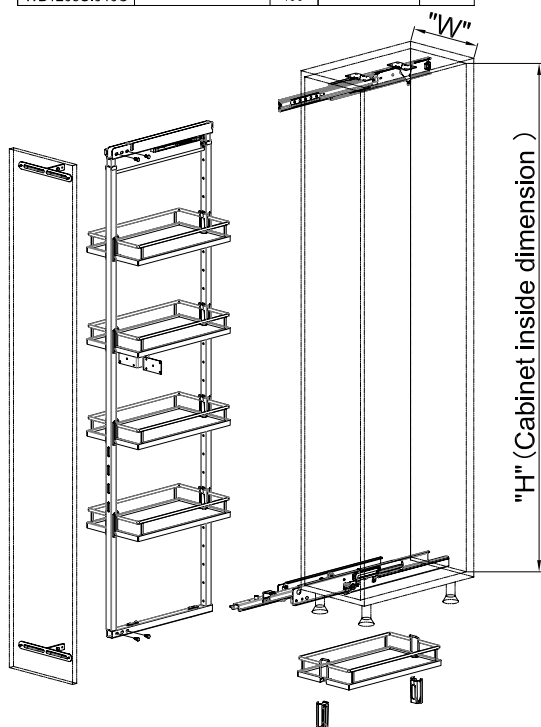



1、Secure top and rear slide.

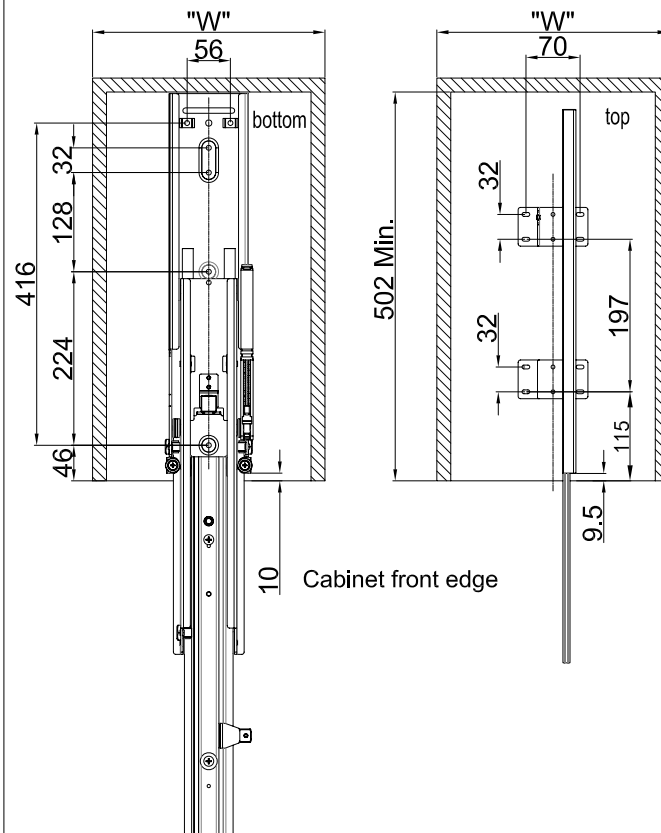

2、Secure using front and rear fixing holes with screws. (Note:the actual size should be based on the thickness of side panel and inner size of cabinet.)

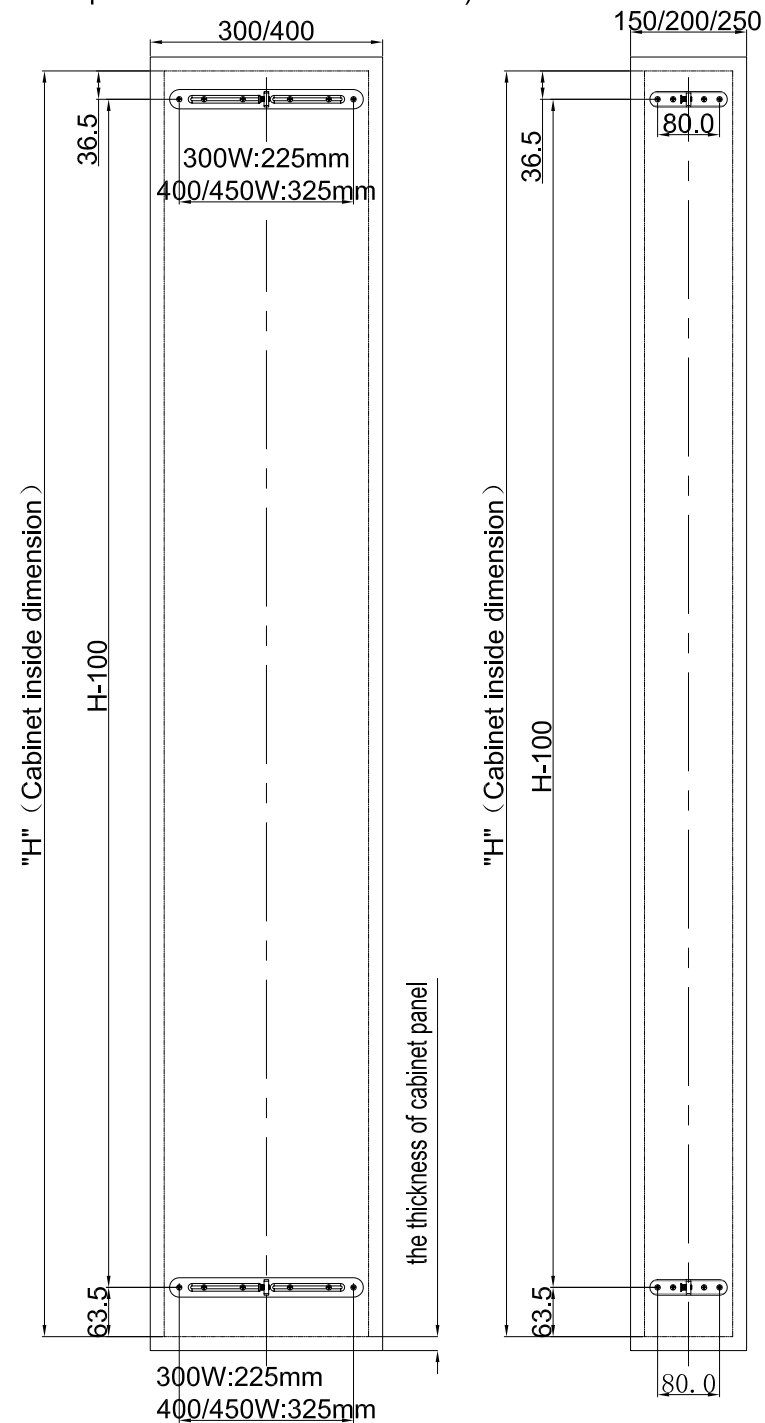


3、Attaching main frame to bottom and top slides.

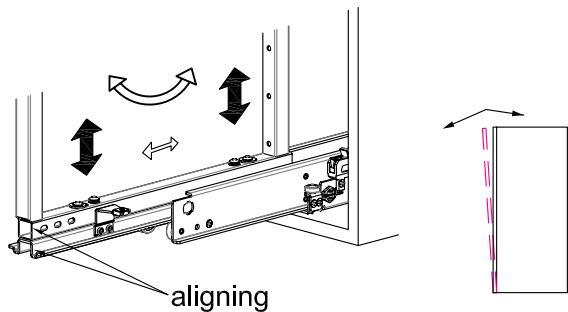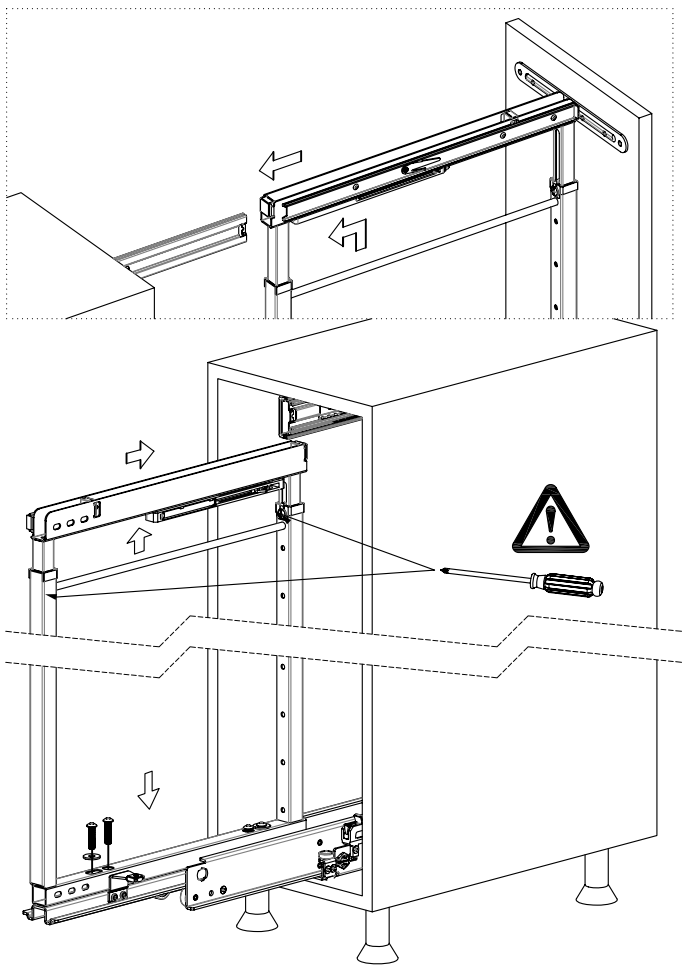

※ Adjusting closure pitch of cabinet door

4、Attaching the front to main frame, putting the correct location to install the reinforcing plate on cabinet door.

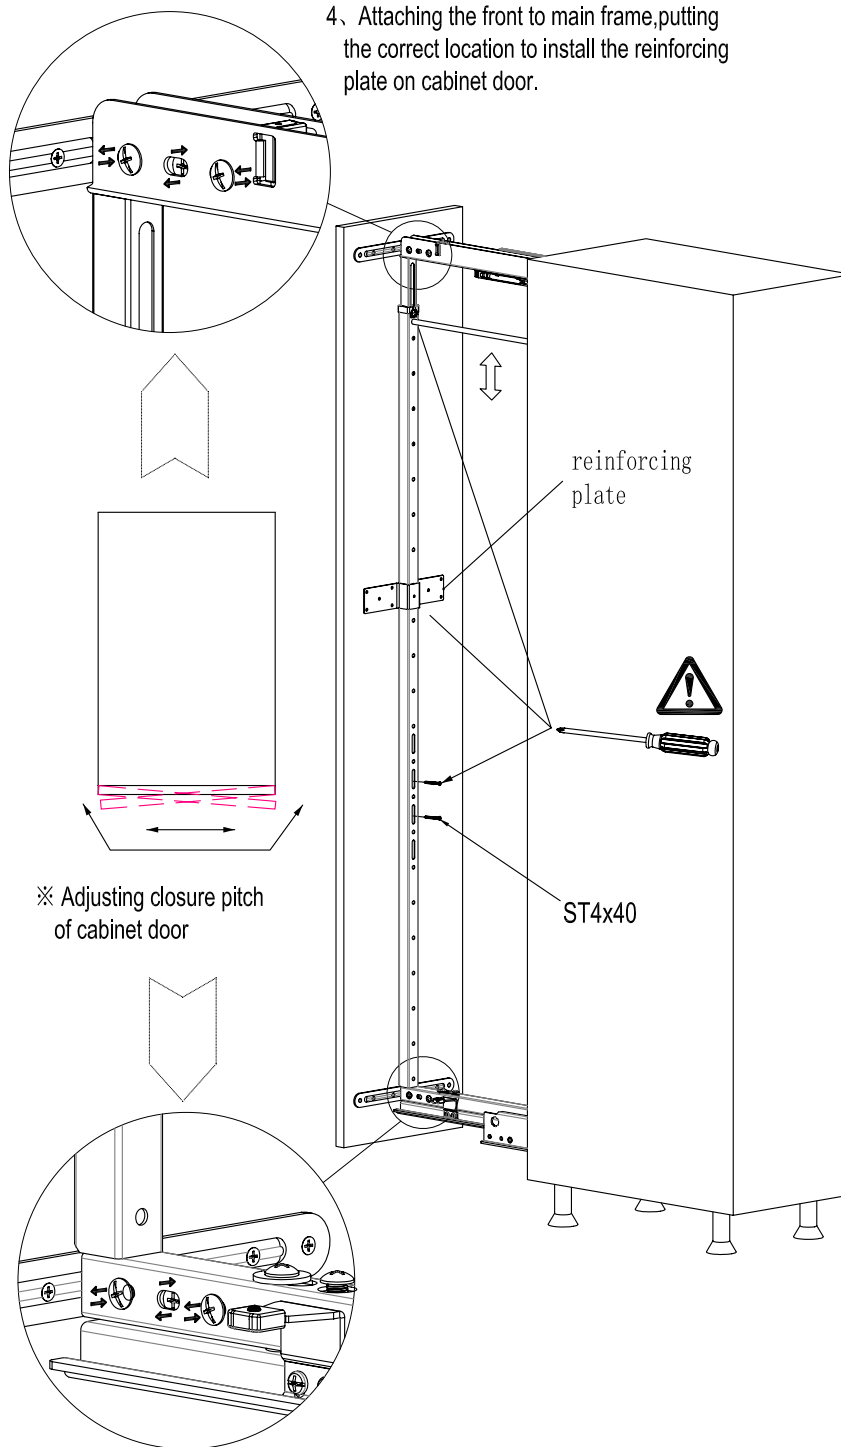

5、Hang the basket onto the main assembly inside the larder. Please refer to the picture. Made Perfect adjustment and then tighten the Adjustment screw.

