



Installation Instruction For WB2336S/WB2337S

Accessory list


Nano coating pull-out basket for dishes and racks

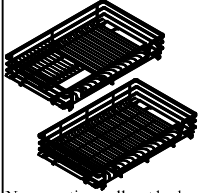


Nano coating pull-out basket

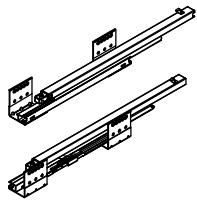


Slide left & right 1set

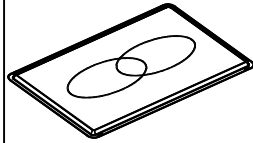

Plastic tray

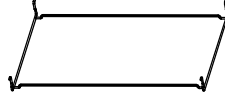


connecting fixing for tray

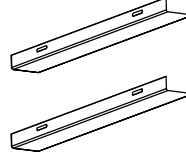


Cover for slide




ST4*16 tapping screw 8pcs

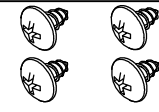


Pan head wooden screw 4pcs

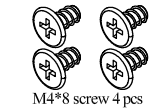


M4*8 screw 4pcs

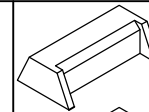


Plastic rear hook 2pcs

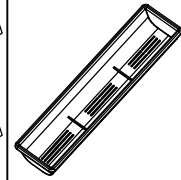


Chopsticks box

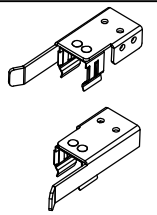


Clip-on bar left & right 1set

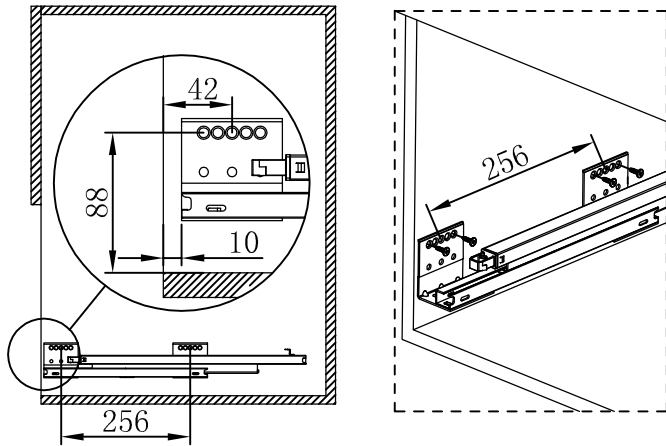


1. Fix the slides to both side panels with 8pcs of st4*16 tapping screw.

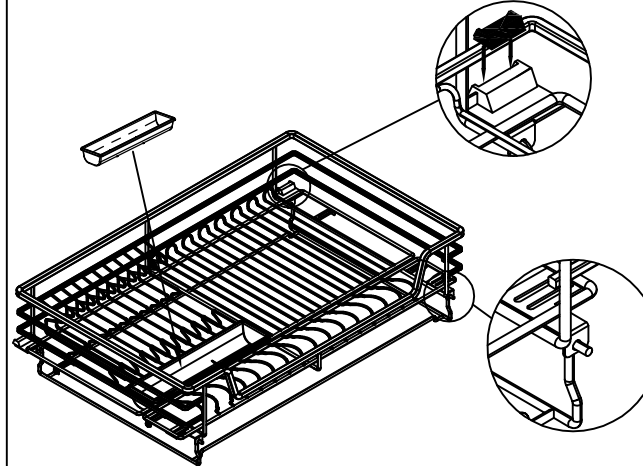


2. Fix the plastic tray onto the wire basket with the connecting fixing. And then put on the plastic rear hook and chopsticks box.

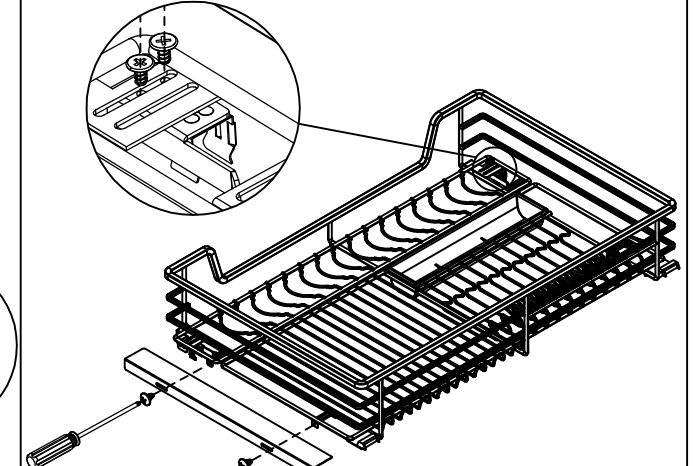


3. Fix the clip on fixing to the wire basket with 4 pcs of M4*8mm countersunk head screws. Fix the cover to the both sides of wire basket with 4pcs M4*6mm pan head wooden screws.

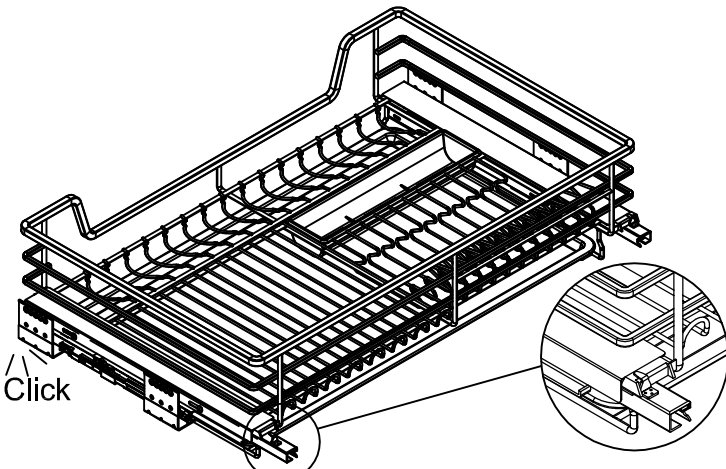

4. Put the basket horizontally on the slides, pull to the end and click. Pull the basket several times to check if the slides are smooth.

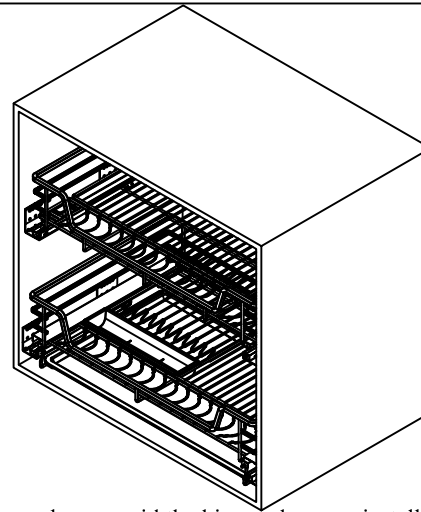

5. Attention: please avoid the hinge when you install the basket (height of the slide)

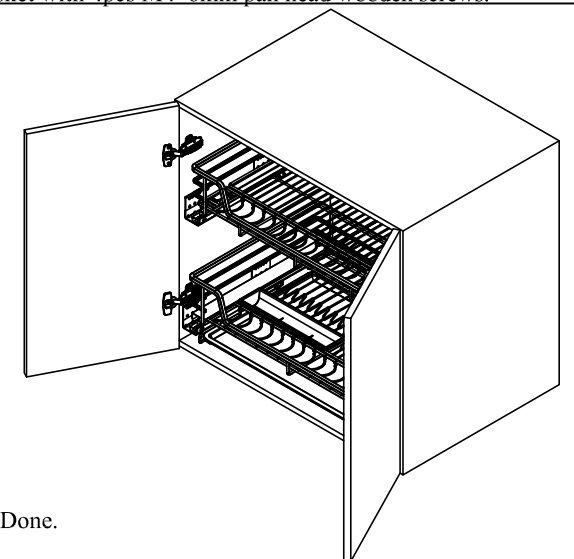

6. Done.